

Lab 4 – Multihoming to Different ISPs

Objective: To investigate various methods for multihoming onto two different upstream ISPs.

The following will be the common topology used.

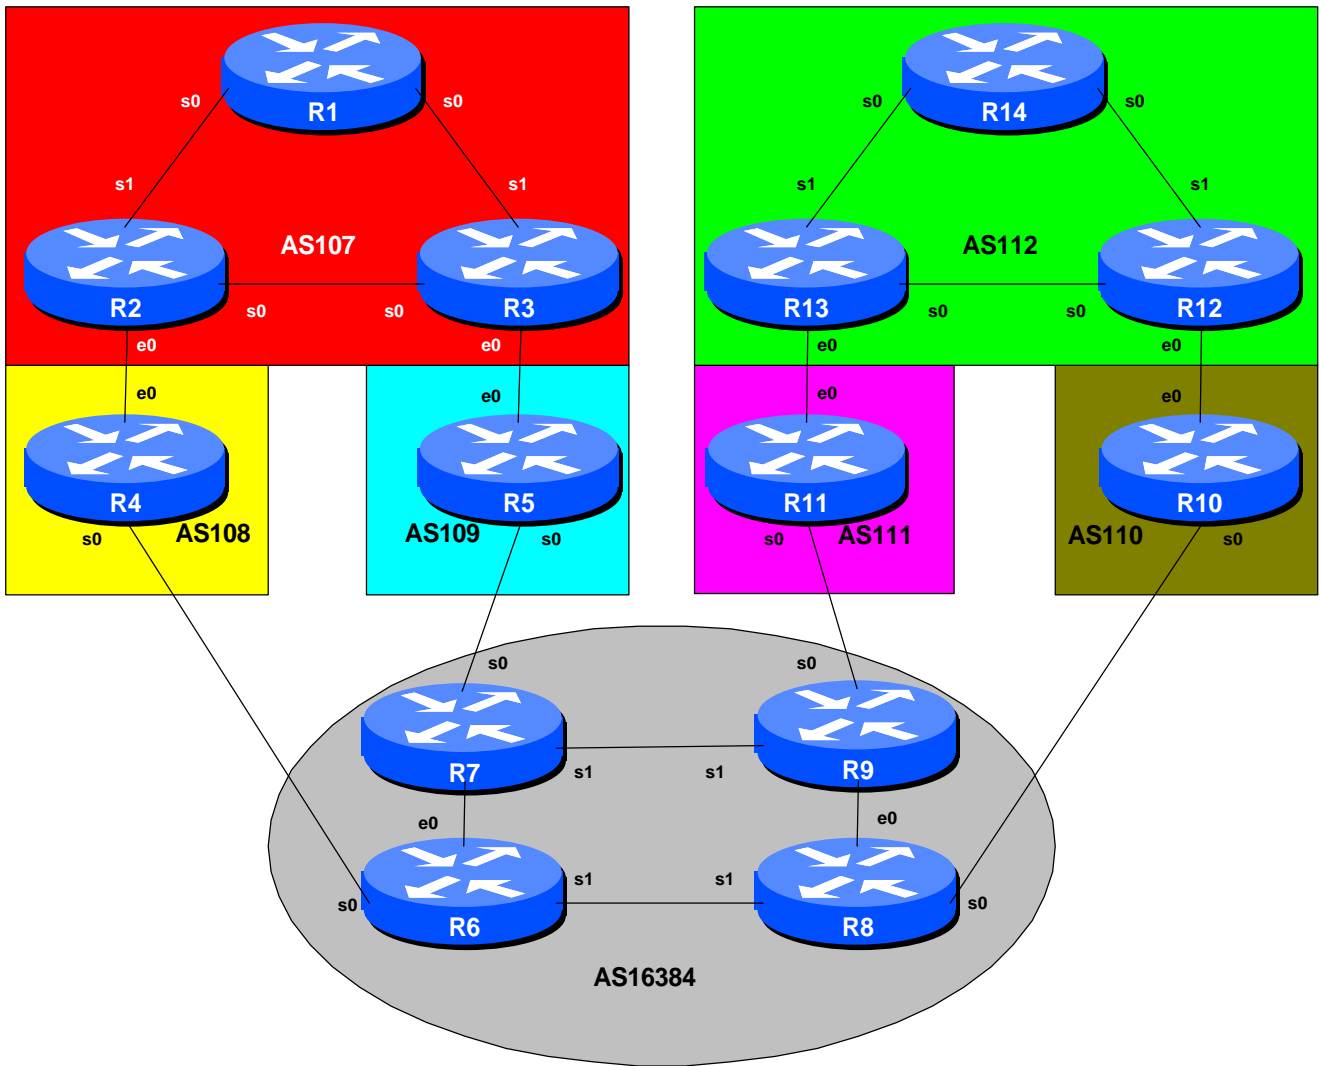


Figure 1 – ISP Lab Multihoming Configuration

Tuesday, July 04, 2000

Lab Notes

The purpose of this module is to demonstrate multihoming in the situation where the customer AS has one connection to more than one upstream service provider. There are at least two situations where this is applicable:

- Enterprise or Service Provider customer requires more than one connection to the Internet to provide resiliency, and/or loadsharing.
- Enterprise or Service Provider customer requires more than one Internet connection to give their network service provider redundancy.

It is important that you review the multihoming presentation before you start with this module. Only configuration examples will be given – it will be left to the workshop participant to use the presentation notes to help them configure their routers correctly.

To ensure an understandable and easy to follow configuration, as well as good practice, a few assumptions about configuring BGP will be made. These are:

- **Use prefix-lists to filter prefixes**
- **Use as-path access-lists to filter ASes**
- **Use route-maps to implement policy**

There are rarely any exceptions to this. Prefix lists are very efficient access-lists and make implementation of prefix filtering on AS borders (and elsewhere) very easy. Please review the BGP presentation materials if there is any uncertainty as to how prefix lists work.

Lab Exercise

1. **Basic Configuration.** Each router team should configure their router to fit into the network layout depicted in Figure 1. Check all connections. Note that most links are using serial cables. Remember what was covered in Lab 1!
2. **Addressing Plan.** These address ranges should be used throughout this module. You are welcome to use your own range within an AS if you desire, just so long as you consult with the teams in other ASes to ensure there is no overlap. In the every day Internet, such address assignment is carried out by the Regional Internet Registry. AS16384 is the transit provider used in this module, and as such represents the Internet at large. A /16 network block has been assigned to that provider.

AS107	220.10.0.0/19	AS111	221.35.0.0/19
AS108	220.19.0.0/19	AS112	221.99.0.0/19
AS109	220.73.0.0/19	AS16384	222.11.0.0/16
AS110	221.19.0.0/19		

3. **Routing Protocols.** OSPF (area 0 only) and iBGP should now be configured between the routers for each of AS 107, AS112 and AS16384. The other 4 ASes do not require OSPF or iBGP as they

only have a single router in them. Any interfaces which should not be running OSPF *MUST* be marked as passive in the configuration. And don't forget to use BGP peer groups for iBGP peers.

Checkpoint #1: *When you have properly configured your router, and the other routers in the AS are reachable (i.e. you can ping the other routers, and see BGP and OSPF prefixes in the routing table), please let the instructor know.*

Scenario One – Primary link and backup link

The first scenario is more commonly employed where the customer has a large circuit to their upstream, and an inexpensive circuit they use almost exclusively for backup purposes to another ISP. (The case maybe that the primary ISP has good connection to the Internet, and the backup ISP is used only as a last resort – for technical, commercial, or political reasons.)

In this case, the whole address block is announced out of both links. However, the announcement going out the backup link has its AS path length increased so that it is at a lower priority. Likewise, the incoming default route announcement from the ISP is “weighted” using local-preference. (**Hint:** remember the purpose of changing the AS Path length? If in doubt, review the BGP presentation material.)

- 4. Enable eBGP between the transit ASes.** AS108 and AS109 should now enable their eBGP link to AS16384. AS110 and AS111 should do likewise. All router teams in these ASes must ensure that they can see all the prefixes of AS108, AS109, AS110, AS111 and AS16384. If they are not there, work with your team members to ensure they appear. Don't forget the static pull-up route when injecting prefixes into BGP! Also, at this stage there is no need to install prefix filters between these ASes – if you would like to, don't forget that you need to allow through the network blocks of the ASes you are providing transit to.
- 5. Prepare to enable eBGP between AS107 and its two upstreams.** AS107 should currently be running iBGP within its own network. AS107 will announce it's /19 address block to AS108 and AS109. AS108 and AS109 will not announce any prefixes to AS107 – they will simply announce a default route. There is no need for any more routing information to be injected into the customer site.
- 6. Create AS107 prefix lists.** First, create the prefix lists on the routers in AS107. Both Router2 and Router3 will announce the /19 aggregate. Both will accept the default route. Example for Router 2:

```
ip prefix-list myblock permit 220.10.0.0/19
ip prefix-list default permit 0.0.0.0/0
```

Tuesday, July 04, 2000

- 7. Create AS108 and AS109 prefix-lists.** The routers in AS108 and AS109 should only accept those prefixes which the customer is entitled to announce. So a prefix list needs to be installed on both Router 4 and Router5 to do this:

```
ip prefix-list Customer permit 220.10.0.0/19
ip prefix-list default permit 0.0.0.0/0
```

- 8. Configure the main link.** Configure the main link between the customer AS and the ISP. For AS107, the link between Router2 and Router4 in AS108 is the main link – the link between Router3 and Router5 in AS109 is the backup. For AS112, the main link is between Router 12 and Router 10 in AS110. Example configuration for Router2:

```
ip prefix-list myblock permit 220.10.0.0/19
ip prefix-list default permit 0.0.0.0/0
!
router bgp 65534
 network 220.10.0.0 mask 255.255.224.0
 neighbor <router4> remote-as 109
 neighbor <router4> description Link to Router4 in AS108
 neighbor <router4> prefix-list myblock out
 neighbor <router4> prefix-list default in
!
ip route 220.10.0.0 255.255.224.0 null0 250
```

- 9. Configure the backup link.** Configure the backup link between the private AS and the ISP. Increase the AS Path Length on outbound announcements to 3, and set local preference on inbound announcements to 80. Remember that the shortest AS Path Length and highest local-preference win during the BGP path selection process. To do this, use a route-map on the peering – you will require an inbound and outbound route-map. Example configuration for Router13:

```
ip prefix-list myblock permit 221.99.0.0/19
ip prefix-list default permit 0.0.0.0/0
!
route-map outfilter permit 10
 match ip address prefix-list myblock
 set as-path prepend 112 112
route-map outfilter permit 20
!
route-map infilter permit 10
 match ip address prefix-list default
 set local-preference 80
route-map infilter permit 20
!
router bgp 112
 network 221.99.0.0 mask 255.255.224.0
 neighbor <router11> remote-as 111
 neighbor <router11> description Link to Router11 in AS111
 neighbor <router11> prefix-list myblock out
 neighbor <router11> prefix-list default in
 neighbor <router11> route-map outfilter out
 neighbor <router11> route-map infilter in
!
```

```
ip route 221.99.0.0 255.255.224.0 null0 250
```

- 10. Configure eBGP in AS109 with AS107.** AS109 is going to originate the default route in the peering with AS107. The BGP command “default-originate” is used to do this. Example configuration for Router 5:

```
router bgp 109
 neighbor <router3> remote-as 107
 neighbor <router3> description Multihomed Customer
 neighbor <router3> default-originate
 neighbor <router3> prefix-list Customer in
 neighbor <router3> prefix-list default out
!
```

- 11. AS108 and AS109 eBGP configuration with AS16384.** Without further configuration changes in AS109, AS107 will be announced by AS108 and AS109 routers to other ASes. It is always good practice to only announce the prefixes you are entitled to announce to the Internet – so now is the time to add prefix filters to the peering with AS16384. The example below is for AS109:

```
ip prefix-list mynets permit 220.10.0.0/19
ip prefix-list mynets permit 220.73.0.0/19
!
router bgp 109
 neighbor <router7> remote-as 16384
 neighbor <router7> description Peering with AS16384 - The Internet
 neighbor <router7> prefix-list mynets out
!
```

- 12. AS112 and its upstreams of AS110 and AS111.** The same types of configuration concepts are also required on AS110, AS111 and AS112. AS112 is a multihomed customer of AS110 and AS111. The teams looking after the routers in these two ASes should use the above configuration examples as hints to set up their own peering sessions.

- 13. Connectivity Test.** Check connectivity throughout the lab network. Each router team should be able to see all other routers in the room. When you are satisfied that BGP is working correctly, try running traceroutes to ensure that the primary paths are being followed. When you are satisfied this is the case, check that the backup functions (do this by disconnecting the cable between the two routers on the primary path) – you will see that the backup path is now used.

Checkpoint #2: Once the BGP configuration has been completed, check the routing table and ensure that you have complete reachability over the entire network. If there are any problems, work with the other router teams to resolve those.

Tuesday, July 04, 2000

Scenario Two – More Controlled Loadsharing

The second scenario is more commonly deployed. Most multihomed sites want to implement some kind of loadsharing on the circuits they have to their upstream provider. The example here discusses only two circuits, but the techniques work equally well for a greater number.

To do this, the whole address block is announced out of both links. On the first link it is left untouched, but on the second link it attracts an AS Path Length increase. Also on the second link, the address block is split into two pieces, with one subprefix being announced with no modification to AS Path Length.

14. Clean up the configuration of AS107 and AS112. Remove the configuration which set the weighting for the previous example – specifically the route-maps. They must be removed from the BGP configuration, and from the main configuration.

15. Configure the address block and subprefixes in AS107 and AS112. Modify the router configuration so that the /19 address block and one /20 subprefix is present in the BGP table. Also set up prefix lists to cater for these blocks. For example:

```
ip prefix-list aggregate permit 220.10.0.0/19
!
ip prefix-list subblocks permit 220.10.0.0/19 le 20
!
ip prefix-list default permit 0.0.0.0/0
!
router bgp 107
 network 220.10.0.0 mask 255.255.224.0
 network 220.10.0.0 mask 255.255.240.0
!
ip route 220.10.0.0 255.255.224.0 null0 250
ip route 220.10.0.0 255.255.240.0 null0 250
```

16. Configure BGP in AS107 and AS112. For AS107, the link between Router2 and Router4 in AS108 is the first link – the link between Router3 and Router5 in AS109 is the second (and is the one which should also announce the subprefix). For AS112, the first link is between Router 12 and Router 10 in AS110. Configure BGP on the border routers in the customer ASes so that the prefix and one sub prefix is announced to the direct peer as described earlier. For example, Router2 could announce *aggregate* as above, whereas Router3 could announce *aggregate* with a lengthened AS Path, and announce *subblock1* as is. For example on Router3:

```
route-map outfilter permit 10
 match ip address prefix-list aggregate
 set as-path prepend 112 112
route-map outfilter permit 20
!
route-map infilter permit 10
 match ip address prefix-list default
 set local-preference 80
```

```
route-map infiltrer permit 20
!
router bgp 107
 network 220.19.0.0 mask 255.255.224.0
 neighbor <router5> remote-as 109
 neighbor <router5> description Link to Router5 in AS109
 neighbor <router5> prefix-list subblocks out
 neighbor <router5> prefix-list default in
 neighbor <router5> route-map outfilter out
 neighbor <router5> route-map infiltrer in
```

17. Connectivity test. Check connectivity throughout the lab network. Each router team should be able to see all other routers in the room. When you are satisfied that BGP is working correctly, try running traceroutes to check the path being followed. Also check that backup via the alternative path still functions (do this by disconnecting the cable between the two routers on the primary path) – you will see that the backup path is now used.

Checkpoint #3: *Once the BGP configuration has been completed, check the routing table and ensure that you have complete reachability over the entire network. If there are any problems, work with the other router teams to resolve those.*

18. Check the network paths. Run traceroutes between your router and other routers in the classroom. Ensure that all routers are reachable. If any are not, work with the other router teams to establish what might be wrong.

19. Summary. This module has covered the major situations where a customer requires to multihomed onto more than one service provider backbone. It has demonstrated how to implement this multihoming using prefix-lists, AS Path Length modifications and local-preference where appropriate.

Tuesday, July 04, 2000

CONFIGURATION NOTES

Documentation is critical! You should record the configuration at each *Checkpoint*, as well as the configuration at the end of the module.